

# 51510 Self Priming Flexible Impeller Pump

06/03

# 51510 Series

#### Self Priming Flexible Impeller Pump

#### Features

Body:	Brass
Impeller:	Neoprene
Seal:	Carbon/Ceramic Mechanical
Shaft:	Stainless Steel
Bearings:	Sealed Ball Bearings
Ports:	3/8" BSP or 3/8" NPT
Weight:	0.62kg (1.4lb)
weight:	0.62Kg (1.4ID)

### Variations Available

Model	Description
51510-2001	3/8" BSP internal ports
51510-9001	3/8" NPT internal ports

### **Typical** Applications

#### Marine:

Engine Cooling, Bilge Pumping, Water Circulation Industrial:

Circulating and Transferring, Velocity Mixing

Farming: Pumping Water for Stock, Liquid Ballast Transfer


### Installation

- 1. Pump may be mounted in any position. Intake and discharge ports are determined by the shaft rotation. Ensure pipe fittings are air-tight or pump will not prime.
- 2. Pump can be belt or direct driven.



Awarning Do not press pulley or coupling on shaft without supporting the other end, bearing and/or seal damage will occur. Ensure belt is of correct tension, ensure drive shafts and pump shaft are aligned before tightening coupling.

- 3. Pump can be operated up to 3600 rpm and up to 22 psi (1.5 bar) (see performance curve).
- 4. Pump will prime at low or high speeds, for a vertical lift of 10 feet (3 m), a minimum speed of 1000 rpm is required.
- 5. DO NOT RUN DRY for more than 30 seconds, impeller damage will occur.
- 6. Operating temperature, 45°F to 180°F (7°C to 82°C).
- 7. Freezing conditions, drain pump by loosening end cover screws.

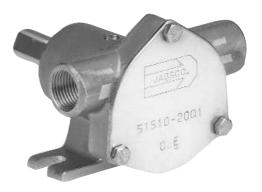

### Service Instructions

#### Disassembly

- 1. Remove end cover screws, end cover and o-ring.
- 2. Remove impeller.
- 3. Remove dust shield and retaining ring.
- 4. Press out shaft/bearing assembly.
- 5. Press out mechanical seal.

#### Assembly

- 1. Press stationary part of mechanical seal into body.
- 2. Press rotary part of mechanical seal onto shaft.
- 3. Press shaft into body, do not allow shaft to touch seal face.
- 4. Fit retaining ring and dust shield.
- 5. Lightly smear impeller bore with grease and fit impeller.
- 6. Fit o-ring, end cover, and secure end cover screws.




DO NOT pump Petroleum or fluids with a flashpoint below 30°C (86°F).



## 51510 Self Priming Flexible Impeller Pump

### 06/03

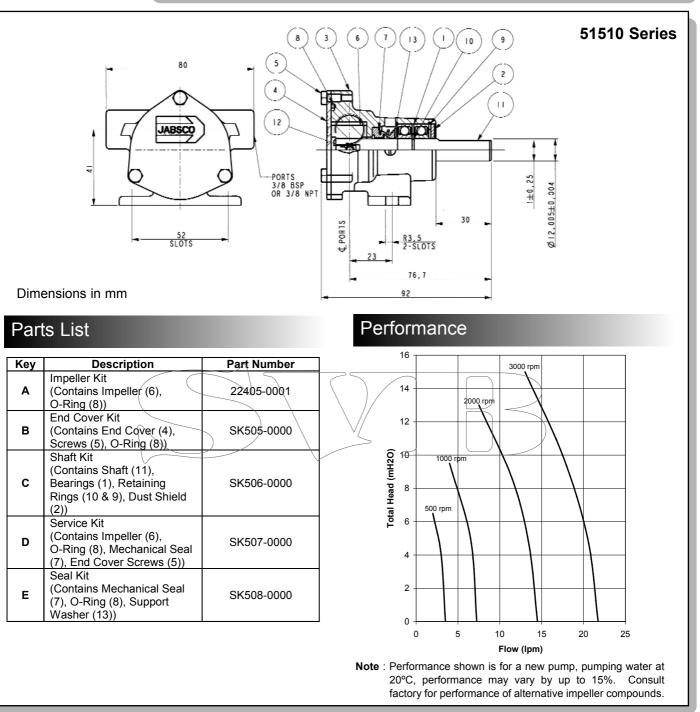

 
 Jabsco, 20 Icon, Foothill Ranch, CA 92610

 Tel: +1 949 609 5106
 Fax: +1 94
USA Fax : +1 949 859 1254 Jabsco Jabsco, Bingley Road, Hoddesdon, Hertfordshire, EN11 OBU UK Tel : +44 (0) 1992 450 145 Fax : +44 (0) 1992 467 132 Fluid Products Canada, 55 Royal Road, Guelph, Ontario N1H 1T1 CANADA Tel : +1 519 821 1900 Fax : +1 519 821 5316 **ITT Industries** NHK Jabsco Co Ltd, 3-21-10, Shin - Yokohama, Kohoku-ku, Yokohama 222 JAPAN Tel : +81 (0) 45 475 8906 Fax : +81 (0) 45 475 8908 Jabsco GmbH, Oststraße 28, 22844 Norderstedt GERMANY Fax : +49 (0) 40 53 53 73 11 Tel: +49 (0) 40 53 53 73 0

Warranty: All products of the company are sold and all services of the company are offered subject to the company's warranty and terms and conditions of sale, copies of which will be furnished upon request. The information provided herein is for guidance only, it does not constitute a guarantee of the performance or specification of any individual product or component. ©Copyright 2002 ITT Industries