

ZX448 MAR_TL_031_0612

۲





۲

۲

Instructions

Installing and Using the Precision Spotlight Remotes

Required for Installation:

marinco.com

- Two (2) No. 6 stainless steel pan head screws (Length and type of screws to be determined by mounting surface)
- Two (2) #16 AWG butt wire connectors

Mounting the wired and wireless bridge remote

- 1. The remotes are all IP54 weather resistant.
- 2. Please choose a mounting location based on the gasket supplied with the remote (*large hole should be towards top*)
- Drill bles the correct size for the mounting screws. The holes through the remotes are sized for a No. 6 pan head screw. The length and thread type will need to be determined by the application. Set aside the 2 screw covers.
- 4. Drill hole for the wiring. Note that the hole needs to be 5/8" to allow the unit to sit flat.
- 5. If mounting the wireless bridge remote it will require a 12 V or 24 V power source.

If mounting the hard wired bridge remote then it does not need a local power source and instead uses the 2 wires connecting from the spotlight to the remote. These two wires will supply the remote with power and control the spotlight. The terminals on the remote can handle a 16 awg to 26 awg wire. Maximum torque on the terminals is 2.21 in lbs (.25 nm)

- 6. Feed wires through drilled surface hole and gasket from below
- 7. For the wireless bridge remote attach the power source wires to the remote (+) positive and (-) negative terminals.

For the hard wired bridge remote attach the 2 wires from the spotlight. The yellow wire needs to connect to the (+) positive and the purple wire needs to connect to the (-) negative. Maximum Torque on the terminals is 2.21in lbs(.25 nm)

۲



9. Apply screw caps to remote to hide screws.

PAIRING OF MOUNTED AND HAND HELD WIRELESS REMOTE TO SPOTLIGHT

1. Turn off all power to the spotlight.

- 2. Apply power to mounted remote. Press and hold the power button on the wireless mounted remote.
- 3. While pressing the power button apply power to the spotlight.
- 4. After a few seconds you will hear the relay click and the light will turn on.
- 5. When the light turns on the paring is complete, release power button.

PROGRAMMING THE REMOTE WHEN MOUNTING THE SPOTLIGHT UP-SIDE-DOWN

NOTE: This procedure reverses the directional buttons on the remote.

- 1. Pairing of the remote described above must be completed first.
- 2. Remove all power to the spotlight.

- 3. Hold down the tilt UP and DOWN buttons on the remote.
- While pressing the 2 buttons apply power to the spotlight and continue to hold down the buttons for 3 seconds until the spotlight tilts up or down.
- 5. The spotlight is now configured for inverted mode. Release buttons.
- 6. To return the spotlight to the standard configuration repeat steps above.



- Speed Control Pressing this button will allow you to change speed of the light, SOS, and Sweep Angle function
- Auto Sweep When this button is pressed the light will begin to sweep left and right at 90° for slow speed and 70° for high speed. Press the button again or a directional button to stop the sweep
- **SOS** (···· — ···) Pressing this button the light will begin to signal the Morse code distress signal. Press again to turn off

Power on/off







Remote Specifications

۲

۲

	Included * Wireless Bridge Remote (SPLR-2)	(Optional) † Hand Held Bridge Remote (SPLR-1)	(Optional) ▲ Wired Bridge Remote (SPLR-3)
Power	12 or 24 Volt (hard wired to power)	CR2450 button cell battery	12 or 24 Volt (hard wired to spotlight)
Current draw (idle / in use)	negligible	negligible	negligible
Wireless range	200 ft (65m)	200 ft (65m)	—
Estimated battery life	—	> 40 hours (continuous use)	-
Dimensions	3.5"W x 2.25"H x .75"D 88mm x 57mm x 19mm	2.0"W x 3.78"H x 1"D 51mm x 96mm x 25mm	3.5"W x 2.25"H x .75"D 88mm x 57mm x 19mm
Weight	2.12 oz. (60g)	2.82 oz. (80g)	2.12 oz. (60g)
Housing material	UV resistant PC/ASA	UV resistant PC/ASA	UV resistant PC/ASA
Button material	Silicone (glow in the dark)	Silicone (glow in the dark)	Silicone (glow in the dark)
Wire	16AWG	—	24AWG
Operating temp range	5°F to 113°F (-15°C to 45°C)	5°F to 113°F (-15°C to 45°C)	5°F to 113°F (-15°C to 45°C)
IP Rating	IP54	IP56	IP54

* There is no wiring required from the spotlight to the bridge remote. The spotlight and the bridge remote must be wired locally to power.

† The hand held bridge remote includes a wrist lanyard and a surface mount cradle.

The wired bridge remote requires hard wiring of 2 leads from the spotlight to the bridge.

 (\bullet)