



Adjust the temperature at the display:

Push “UP” Nr. 6 and “DOWN” Nr.7 button at once, then “A0°C” appears.

With “UP” and “DOWN” you can adjust the value up to 4°C higher or lower.

If the display shows a higher value than it is actually, adjust with “DOWN” button to a lower value.

If the display shows a lower value than it is actually, adjust with “UP” button to a higher value.