

The purpose of this guide is to provide the basic operation for this equipment. For more detailed information, see the Operator's Manual.

All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

Controls

POINTS/GO TO key
Short push: Enter point at cursor position.
Long push: Go to selected point.

HOME/CTRL key
Short push: Select display.
Long push: Switch active display.

ESC/MENU key
Short push: Escape current operation.
Long push: Show menu.

CursorPad
Arrows: Move cursor.
ENT key: Display pop-up menu.

EVENT/MOB key
Short push: Enter point at current position.
Long push: Enter MOB mark.

POWER/BRILL key
Short push: Power on; adjust brilliance.
Long push: Power off.

RotoKey™
Rotate: Zoom in/out chart; select menu item.
Short push: Display base RotoKey menu.
Long push: Display full RotoKey menu.

Operations

How to zoom in or out the chart scale (2D mode only)

Zoom in **Zoom out**

How to pan the charts

How to enter a point

- Cursor position
- MOB position (Long push)

How to go to a point

Quick point

Select a position. (Long push)

Saved point

Put cursor on a point.

MOVE
DELETE
EDIT
GOTO
DETAILED
EASY ROUTING

Select [GOTO].

How to select 2D/3D mode

2D/3D Mode

2D
2D Perspective
3D

How to find object information

Put cursor on an object.

Object Information
Tower White 85 Feet
Flashing(1) White, 15 Seconds
85 Feet 24 Miles

Fish Finder


How to select the operating mode



How to select the operating frequency



How to select picture advance speed

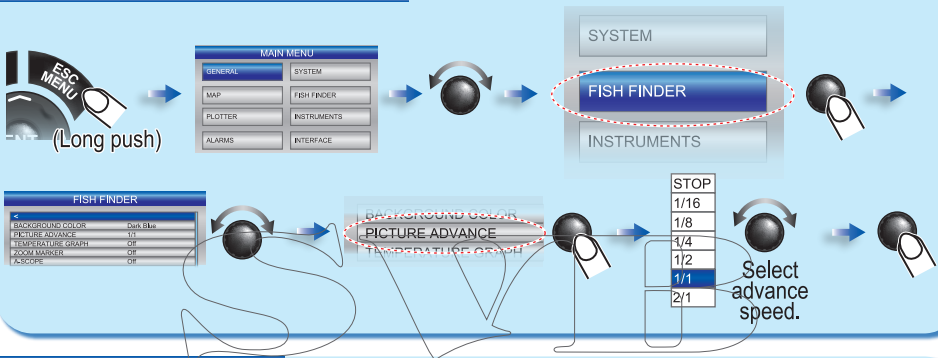

How to adjust the picture

