FASTMOUNT.COM
PANEL MOUNTING SYSTEMS

Setting the standard for panel mounting

INSTALLATION GUIDE

PC-F1A Self tapping female (page 1 of 2)

USE WITH:

PC-M1A PC-VM1 PC-SM2

PC-M2H PC-VM1H PC-SM2H

INSTALL WITH:

CT-01 CT-03 CT-07 CT-10




INSTALLATION STEPS (see reverse for more options)

1 Drill hole through panel & frame

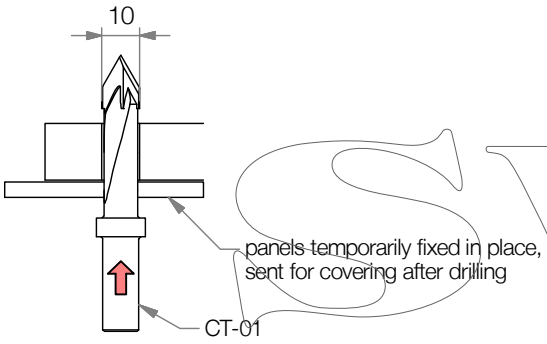

2 Drill out frame hole with CT-07

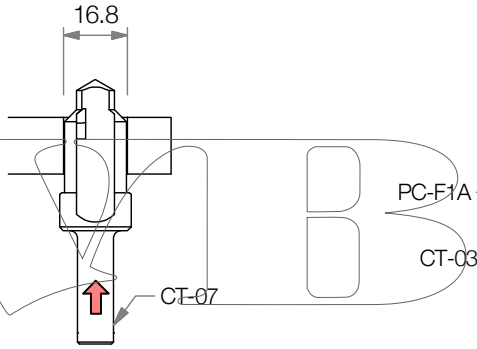

3 Screw fit PC-F1 with CT-03

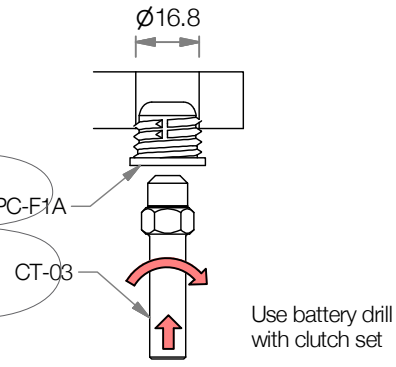

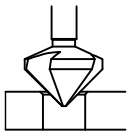

NB. CT-12 to CSK hole edge
in hard material (1-2mm)

4 Screw fit PC-F1 into thin frame

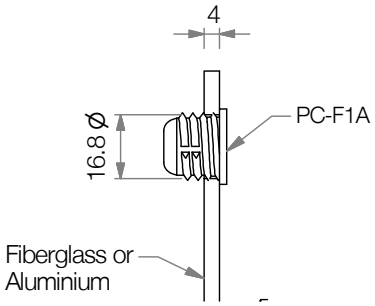

PC-F1A can be used as screw / friction fit
into thin frames & seat backs

5 Cutaway view showing panel mounting

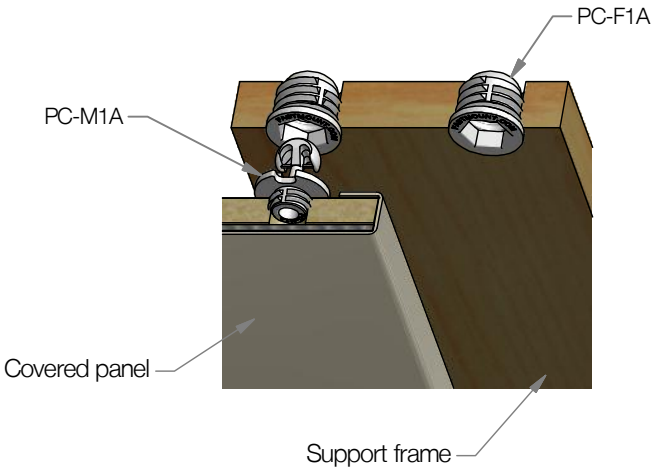

P. +64 21 725 418 / F. +64 9 909 6034 / E. info@fastmount.com / Designed & Manufactured in New Zealand

www.fastmount.com

*Specification subject to change without notice, see website for updates. Copyright © Fastmount Ltd.

FASTMOUNT.COM
PANEL MOUNTING SYSTEMS

Setting the standard for panel mounting

INSTALLATION GUIDE

PC-F1A Self tapping female (page 2)

USE WITH:

INSTALL WITH:

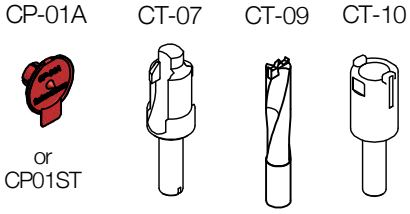

INSTALLATION STEPS (continued from previous page)

1 Fit CP-01A into PC-F1A then push panel to mark center

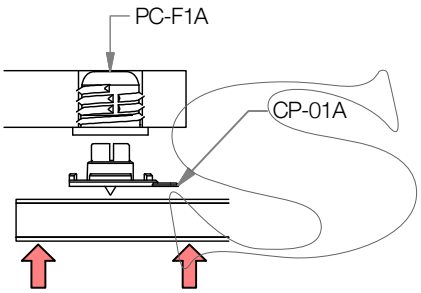

2 Drill panel on center mark with CT-09 7.5mm deep for PC-M2H

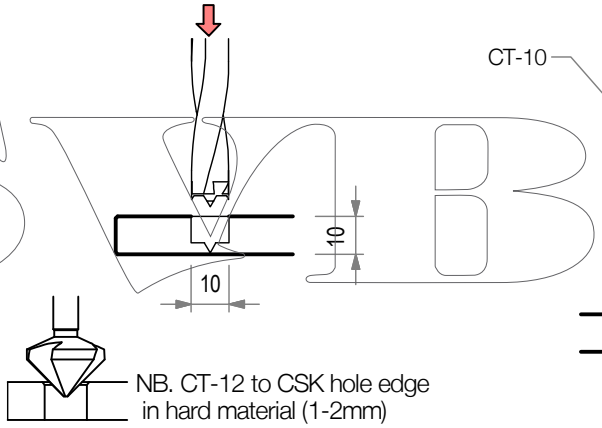

3 Screw fit male clip with CT-10

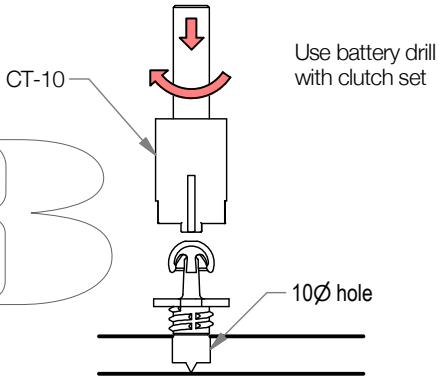

INSTALLING ADHESIVE FIT MALE CLIPS (first complete steps 1 to 3, page 1)

4 Clip PC-SM2 into PC-F1A

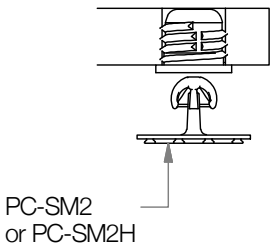

5 Apply adhesive to PC-SM2

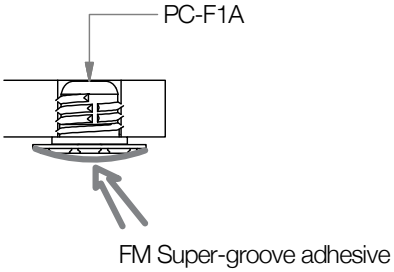

6 Place panel & support while adhesive dries

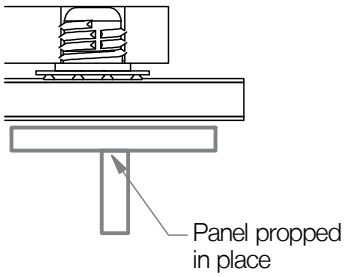

P. +64 21 725 418 / F. +64 9 909 6034 / E. info@fastmount.com / Designed & Manufactured in New Zealand

www.fastmount.com

*Specification subject to change without notice, see website for updates. Copyright © Fastmount Ltd.